



## LIST OF PARTS

1 Barrel *	24 Firing Pin Lug	47 Trigger Backstop Pin	70 Magazine Body
2 Front Sight Base *	25 Firing Pin Spring	48 Securing Pin	71 Follower
3 Front Sight Base Screw (3x) *	26 Extractor *	49 Stock Screw Nut	72 Magazine Spring
4 Front Sight *	27 Extractor Pin	50 Stock Screw	73 Magazine Housing Insert *
5 Front Sight Screw *	28 Extractor Spring *	51 Toothed LockWasher	74 Magazine Housing Insert Pin *
6 Front Sight Cover *	29 Cocking Lever	52 Stock *	75 Magazine Body
7 Fore-Stock Fixture	30 Recoil Spring (2x)	53 Butt Plate *	76 Follower
8 Rear Sight *	31 Recoil Spring Rod (2x)	54 Butt Plate Screw (2x) *	77 Magazine Spring
9 Rear Sight Screw (2x) *	32 Recoil Spring Carrier	55 Sling Swivel (2x) *	78 Slide Stop *
10 Receiver	33 Trigger Mechanism Housing *	56 Fore-Stock *	79 Slide Stop Spring *
11 Slide *	34 Trigger Safety	57 Fore-Stock Screw	
12 Slide Pin *	35 Trigger Safety Pin	58 Fore-Stock Lug	
13 Barrel Screw (2x)	36 Trigger Safety Pin Spring	59 Fore-Stock Lug Screw (2x)	
14 Body Locking Pin	37 Trigger	60 Magazine Body	
15 Ejector *	38 Trigger Pin	61 Magazine Plunger	
16 Ejector Pin	39 Trigger Spring	62 Magazine Plunger Spring	
17 Casing	40 Disconnecter	63 Follower	
18 Magazine Housing	41 Disconnecter Pin	64 Magazine Spring	
19 Magazine Catch	42 Disconnecter Spring	65 Magazine Base Plate	
20 Magazine Catch Pin	43 Hammer	66 Magazine Body	
21 Magazine Catch Spring	44 Hammer Spring	67 Follower	
22 Bolt *	45 Hammer Insert (2x)	68 Magazine Spring	
23 Firing Pin	46 Hammer Pin	69 Magazine Base Plate	

The parts marked \* differ according to versions, or as case may be in some versions are entirely missing.